

ERAT SLIDE 2U RAILED PATCH PANEL SERIES




erat

ERAT SLIDE 2U RAILED PATCH PANEL SERIES



Product Family
Railed



Standarts
19"
2 Rack Unit



Protection Rating
IP 10



H 88 mm
W 434 mm
D 243 mm



Available Colors
Light Grey (RAL7035)
Black (RAL9005)



Weight
Net 3,50 kg
Gross 3,95 kg

Product Overview


The Erat Slide 2RU railed patch panel system in its basic form is supplied with the panels unloaded without adaptors ready for you to install the adaptor of your choice. The panel can also be pre-loaded complete with the required adaptor and simple splice management kit, or preloaded with pigtails to meet your project needs. The tray is locked in place with two simple plastic quarter turn lock to operate. This solution allows for easy access to the front patch cords as well as the splice trays and pigtails after being pulled out. Standard panels are available empty for complete field configuration, half-loaded with adaptor plates for field termination and cable assembly installation, or stubbed with a factory-installed cable assembly of a user specified length.

Features

- Up to 96 fibres in 2RU
- Printed port numbers on the front plate
- Available with different front plates (sold separately to reduce stock value) for all type of connectors
- Adjustable depth in rack
- Rear cable entry options
- Rear Assembly option to Rack
- Light in weight and robust structure
- Different Splice tray assembly option
- Removable Adapter Plates

Specifications

- Cold Rolled Steel Construction
- Telescopic Rail
- Durable textured powder coat finish available in Black(RAL9005) or Light Grey (RAL7035)
- Universal 19" rack compatibility
- Special Plastic Quarter Turn lock for tray
- Cable Entry 21mm(6pcs),
- Cable Entry 23mm(6pcs)
- Compliant to RoHS

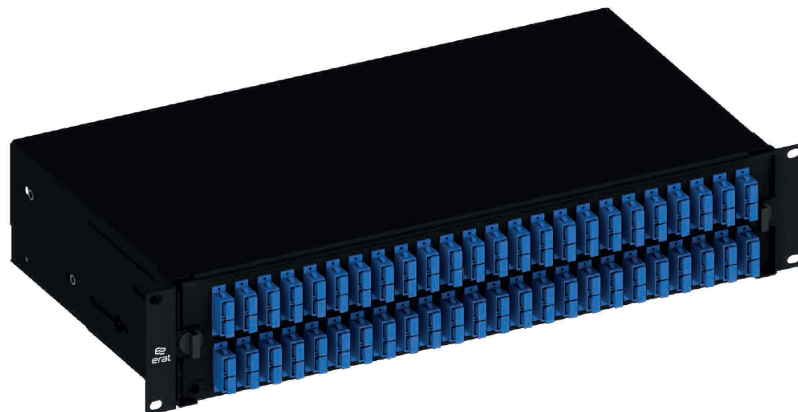

▶ ERAT SLIDE 2U RAILED PATCH PANEL SERIES



Dimensions

